
SAT 30

Robotic pool cleaner

User manual

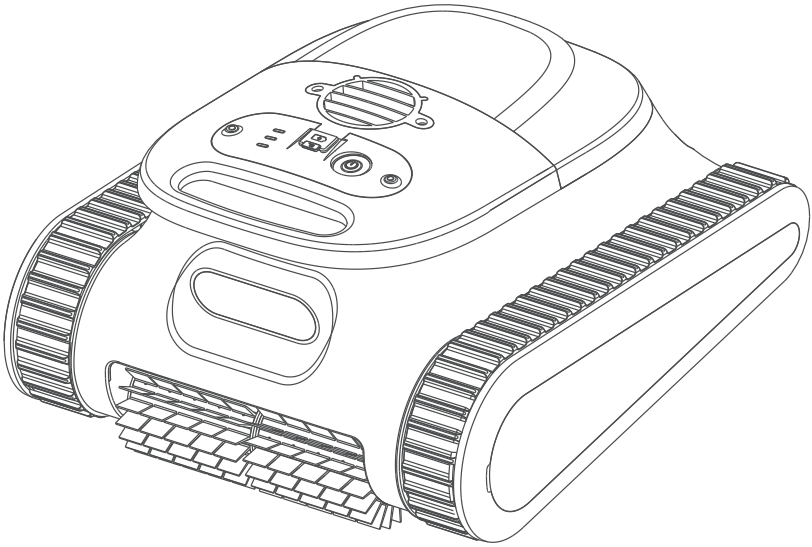

V2.0

CONTENTS

PRODUCTION INTRODUCTIONS 02

1. WARNINGS AND CAUTIONS 02

2. STRUCTURE 03

3. SPECIFICATIONS 03

4. LED STATUS 04

5. CLEANING MODES 04

USING THE POOL CLEANER 05

1. CHARGING 05

2. PLACEMENT INTO THE POOL 05

3. REMOVAL FROM THE POOL 06

4. CLEANING 07

5. REPLACEMENT OF BATTERY 08

OFF-SEASON STORAGE 10

TROUBLE-SHOOTING & FAQ 10

Declaration of Conformity (CE) 11

WARRANTY 12

PRODUCTION INTRODUCTIONS

1. WARNINGS AND CAUTIONS

PLEASE READ AND FOLLOW ALL INSTRUCTIONS


⚠ Please adhere to the following warnings and cautions before you use the Pool Cleaner.

⚠ Use the device only according to these safety instructions.
It is not liable for any loss or injury caused by improper use of the device.


1. Use only the original battery and battery charger provided.
2. Keep the device out of the reach of children, vulnerable persons (with reduced physical, sensory, or mental abilities), and persons who lack the requisite knowledge and experience. Users must receive appropriate instruction and supervision before using the device. Do not allow children to perform cleaning or maintenance tasks.
3. Be careful when handling the battery casing to avoid the risk of fire and/or burns. Do not open it or crush it and do not place it near a source of heat.
4. Do not insert hands and/or fingers into the impeller motor area.
5. Remove the pool cleaner from the pool before allowing people to enter the pool.
6. Always switch OFF the device before cleaning the filters and /or examining the robot.
7. Be careful when lifting the device to avoid bodily injury.
8. Do not use the device and/or its battery in case of any mechanical damage.
9. Do not use an extension cord to connect the battery charger to electric socket. Use only an appropriately located power outlet.
10. In case of power cord is damaged the entire charger must be replaced with original.
11. Place the battery charger at least 3.5 m / 12 ft from the pool edge during operation.
12. Place the battery charger at least 11 cm / 4 in above the ground to protect users against electric shock.
13. Use a Residual Current Device (RCD) with a rated residual operating current not exceeding 3OmA to power up the battery charger.
14. The Lithium-Ion battery should be recycled at a certified battery electronics recycler. Batteries should NOT be discarded as waste or placed in municipal recycling bins. Do not disassemble the battery.
15. Read the instructions carefully before use.
16. Only for use in swimming pool water.
17. Do not use out of water.
18. Do not use when people or animals are in the pool.
19. Do not let children play with the device.
20. Keep out of reach of children.
21. Unplug the device from the power supply before any cleaning or maintenance operation.
22. Only use the provided charger.
23. Do not charge the product immediately after use and ensure that the charging port is completely dry.
24. Do not expose the battery to a heat source or fire.
25. Do not immerse or expose the charger to rain.
26. When using the product, always make sure to insert the battery correctly to ensure its water tightness.

PLEASE SAVE THESE INSTRUCTIONS.


2. STRUCTURE

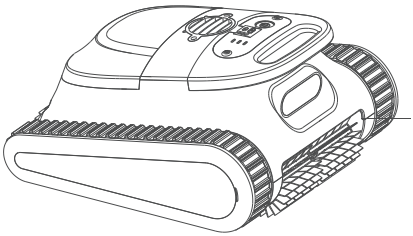


Pool Cleaner

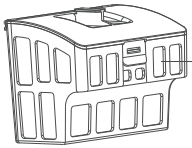

Filter Basket

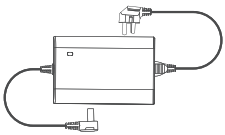

Charger



Hook



User Manual

3. SPECIFICATIONS

Applicable pool size	Up to 2150 sq ft (200 m²)
Water depth supported	1.6-9.84 ft (0.5-3 m)
Charger input	100-240 VAC, 50/60 Hz
Lithium battery capacity	22.2V/7800 mAh
Battery life	2-3 hours
Charging time	3 hours
Filtration system	Filter Basket: 250um, for regular cleaning
Moving speed	60 ft/min / 18 m/min
Dimensions (L x W x H)	16.85x15.16x8.98 in /42.8x38.5x22.8cm
Net weight	19.8 lb / 9 kg
Waterproof level	IP68
Storage temperature	32 to 104°F (0 to 40°c)

4. LED STATUS

LED Color	State	Lamplight
Blue	Initialization phase	Flash per 1 second
	Free time	Flash per 3 seconds
	Work	Solid
Yellow	Device is abnormal	Flash per 1 second
Red	Low battery	Flash per 1 second
	Charging	Solid
Green	Fully charged	Solid
Purple	Failure to get out of trouble	Flash

5. CLEANING MODES

Search “Unlock SEAUTO” on either Google play or the App store.

Turn on bluetooth in your phone, as well as the cleaner. Make sure your phone is near to your cleaner.

Once you connect the cleaner in the App, you can choose the Clean Modes to 3 modes for shift or by pressing the on/off button on the cleaner.


Modes [a]	Cleaning Coverage	LED Reminder
All-cover mode [b]	Covers all areas	All-cover mode
Wall-only mode	Only cleans the wall	Wall only
Floor-only mode	Only cleans the floor	Floor only


Note:
a) The modes can be selected by pressing the switch button to shift.
b) When turning on the cleaner, it will be in All-cover mode as default.

USING THE POOL CLEANER


1. CHARGING


a. Connect to the power supply - it will then start charging. The LED light will be solid red.

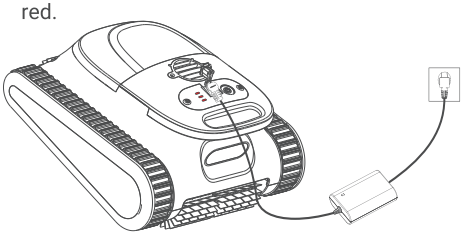

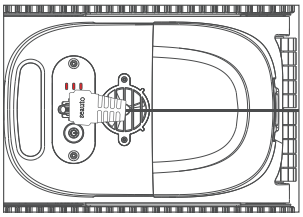

b. It will be solid green when the device is fully charged, then will turn off automatically in 10 minutes.

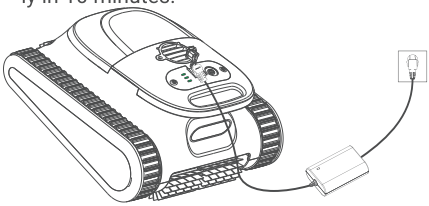

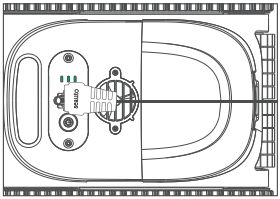


Note: Charging should be done indoors to prevent damage to the charger, the charger is not waterproof, not sunproof.

2. PLACING INTO THE POOL


ALL-COVER MODE (Default mode)

Note: After turning on the cleaner, the cleaner will automatically clean the entire pool, including wall and floor.

a. Press the button to turn it on - it will show a flashing blue light

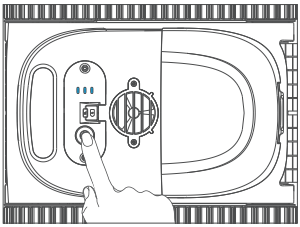


b. Put the device into the pool, making sure that the water surface is above the top of the cleaner to enable proper use. When the device cleans the pool in All-cover Mode, the Wall&Floor LED indicator turns solid blue.

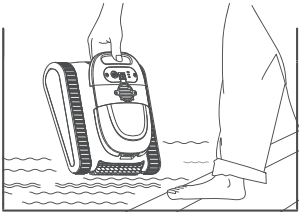


3. RETRIEVING FROM THE POOL

Note: Please attach the hook (included in your packaging) to a compatible pole, the pole is not included in the package.

a. Hook the cleaner's handle with the retrieval hook and pull it out of the water.

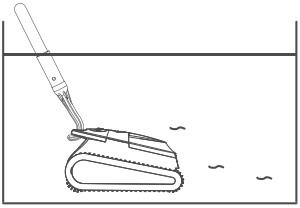


b. Before cleaning the filter, press and hold to switch off the cleaner.

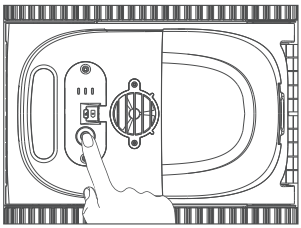


4. CLEANING


Note: Clean the filter basket before debris dries out. Ensure the cleaner is turned off.

a. Unbuckle to open the lid.

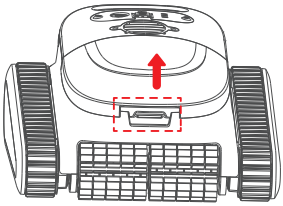

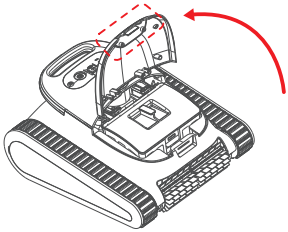



b. Remove the filter basket.

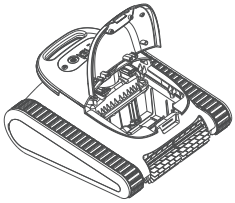




c. Open the cap of the basket.

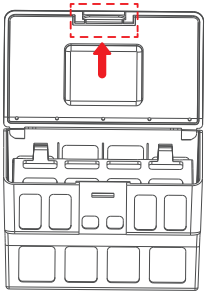


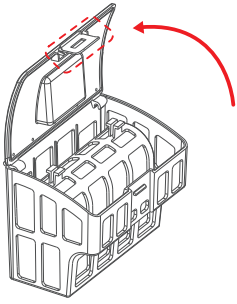


d. Clean the filter basket.

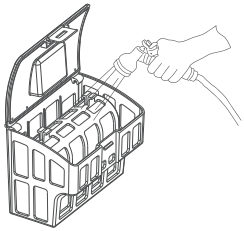

e. Assemble the robot.

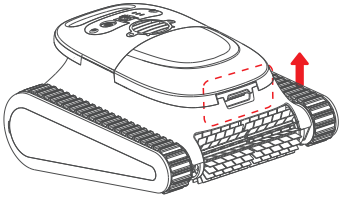

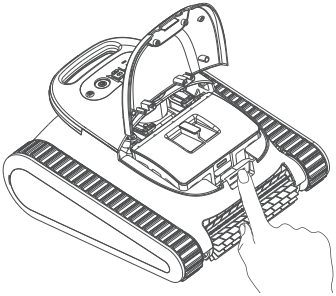


5. REPLACEMENT OF BATTERY

Note: In case the performance of new battery being affected, before replacement please leave the cleaner stand for 2 days to ensure the complete evaporation of moisture.


Replacing the battery as follows to make pool cleaning robot an optimal cleaning state.

a. Remove the six screws that used to fix equipment and fetch out the used battery.

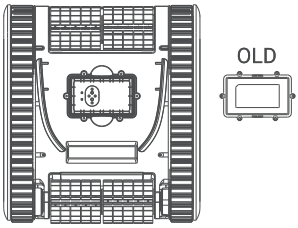


b. Insert the new battery according to the corresponding contacting positions of used battery.

Note: Before putting in a new battery, clean up the water droplets/sand and other foreign objects in the connection position.

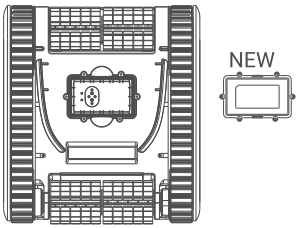

c. Installing, fixing and locking the screws.

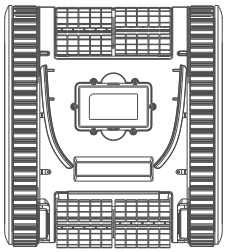

OFF-SEASON STORAGE

If the pool cleaner will not be in use for an extended period, perform the following storage steps:

1. Make sure that no water is left in the pool cleaner.
2. Thoroughly clean the filter basket and insert them back into place.
3. Store the pool cleaner in a protected area out of direct sun/rain/frost at a temperature of between 5˚-45˚C / 41˚-113˚F.
4. Charge the pool cleaner once per month to protect the battery.

TROUBLE-SHOOTING & FAQ

If the suggested solutions do not solve the problem, please feel free to contact us.

Q: What kind of swiming pool is suitable?
A: It is recommend to 200 m²

Q: Why doesn't the cleaner respond after turning on the cleaner?
A: The battery may be dead after a long-time delivery or storage. Please charge the device, the light will be solid red while charging.

Q: Why can't it climb the wall?
A1: It may be set to the Floor-Only Mode. Please the button to select the right mode.
A2: There is too much garbage or debris in the filter basket. You'll need to remove the basket and clean it.

Q: Why does the cleaner just sit at the bottom of the pool and not move or move slowly?
A1: It may be caught in the drain outlet on the floor. It will try to float itself to break free. If it is still stuck for several minutes, please use the pole to help.
A2: It may suck up lots of debris in a very short time if it's placed into a dirty pool, so check and clean the filters if needed.

Q: Why does the front part float while the rear part stays on the floor?
A: It's an intelligent feature of our pool cleaner, to break free from being stuck.

Q: Why does the cleaner automatically switch off after a few hours of charging?
A: It is designed to shut off automatically in 10 minutes after fully charged to protect the battery and ensure its lifespan. So, you can go out with confidence without worrying about charging safety.

Q: What is the issue when the cleaner lights up with a yellow light?
A: The yellow light means the cleaner has a problem (over-currented due to being stuck, or failure to start). Take the cleaner out and re-start it – it should then be ready to work.

Q: How can I get replacement accessories?
A: Please contact your purchase channel. Or you can visit our website, or give us a call – we are available to help you out.

Q: How can I buy a long pole and what size is it?
A: We offer a pick-up hook in the box, which is the universal pool accessory – the hook fits a standard pole size with an 1-1/4" (25-32 mm) diameter connection end. You can easily find a pole in your local market or shop online.

Q: Why are there some water droplets inside a newly purchased cleaner?
A: As every cleaner is rigorously tested before leaving the factory, including underwater test, etc. So, there may be little water left inside, please feel free to use it normally.

Q: What should I do if the cleaner get a purple LED while working in the pool?
A: The cleaner is stuck by an obstacle at the bottom of the pool, please use the pole to remove the cleaner, restart it and put it back into the pool.

Q: Why can't I turn off the cleaner when I take it out of the pool?
A: It is because there is water in the water detection probe, and the cleaner mistakenly thinks that it is still working under the water, so it can be turned off after wiping the probe clean.

Declaration of Conformity (CE)

Seauto declares that this product meets all the requirements of the applicable European directives 2014/35/EU (LVD); 2014/30/EU(EMC); 2011/65/EU (RoHS). N°1907/2006 (REACH). You can request the full text of the declaration of conformity by emailing to support@seautorobots.com.

WARRANTY

This product has passed all quality control and safety tests, conducted by the technical department of the factory.

1. **1 years warranty on machine and 1 year on battery from the date of purchase.**
2. There is no extension warranty for the consumables (filter net).
3. This warranty will be void if the product has been altered, misused, or has been repaired by unauthorized personnel.
4. The warranty extends only to manufacturing defects. It does not cover any damage resulting from mishandling of the product by the owner.
5. The order number or record must be presented for any claim or repair during the warranty period.
6. Please email or call us with any warranty issues, or visit our website for more information and support on accessories and consumables.

Warranty Exclusion Terms – Pool Cleaner Robot
In accordance with French consumer and civil law, legal warranties apply in case of non-compliance or hidden defects. Additionally, any offered commercial warranty shall not cover the following situations:

1. Improper or Inappropriate Use
Use in public, commercial, or collective swimming pools.
Use in saltwater pools or pools treated with inappropriate or overdosed chemicals.
Use with water that has unsuitable pH, temperature, or chlorine levels, outside the manufacturer's recommended ranges.
Use of the robot out of the water, or in an empty or partially filled pool.

2. Improper Maintenance and Storage
Lack of regular maintenance (e.g., filter cleaning, rinsing after use).
Storage in improper environments such as freezing temperatures, excessive humidity, extreme heat, or prolonged sun exposure.
Damage caused by foreign objects left in the pool (e.g., toys, rocks, debris).

3. Physical or Cosmetic Damage
Damage due to impacts, drops, or mishandling.
Scratches, cracks, or other aesthetic issues that do not affect the functionality.
Water infiltration caused by misaligned or non-original seals.

4. Unauthorized Repairs or Modifications
Repairs or tampering performed by unauthorized or unqualified personnel.
Disassembly or opening of the device without authorization.
Use of non-original or non-certified spare parts.

5. Electrical or Environmental Issues
Use with an unsuitable electrical supply (voltage, frequency, or unprotected outlets).
Damage caused by power surges, lightning, short circuits, or faulty installation.
Immersion of non-waterproof components (e.g., transformer, control unit) in water.

6. Normal Wear and Tear
Wear of consumable parts such as brushes, filters, belts, wheels, etc.
Gradual performance loss due to intensive use or the product's normal lifespan.

7. Failure to Follow User Manual
Failure to follow usage, safety, or installation instructions provided in the user manual.
Failure to register the product when required for warranty activation.

8. Force Majeure or Accidental Events
Damage resulting from fire, flooding, earthquakes, vandalism, theft, or any other unforeseeable external events.

Notice: Any warranty claim must be accompanied by proof of purchase, full compliance with the user manual, and may be subject to technical inspection.

Manufacture No.: SAT30
+1 800-618-8968
support@seautorobots.com
https://seautorobots.com
Mon-Fri, 09:00-18:00 (EST)

Made in China

01.007.0105