EU

ABYS 200

Robotic Pool Cleaner

User Manual



EN 03-15P

FR 17-29P

ES 31-43P

PT 45-57P

DE 59-71P

NL 73-85P

Built By seauto

EN

TABLE OF CONTENTS

1 About the Pool Cleaner 3

2 Important Safety Instructions 4

3 Specifications 5

4 Pool Cleaner Parts 6

5 Use the Pool Cleaner 7

- 5.1 Before You Start 7
- 5.2 LED Indicators 7
- 5.3 Charge the Pool Cleaner 7
- 5.4 Place the Pool Cleaner in the Pool 8
- 5.5 Remove the Pool Cleaner from the Pool 8
- 5.6 Switch Off the Pool Cleaner 9
- 5.7 Clean the Pool Cleaner 9

6 Storage 10

7 FAQs and Troubleshooting 11

8 Customer Service 13

1 ABOUT THE POOL CLEANER

The Pool Cleaner is an advanced product for pool cleaning. It has a reliable filtration system for all pool conditions, an active brushing mechanism, and an all-surface climbing brush for maximum pool hygiene. It can handle pools up to 200m² with a water depth of 0.5 - 3 m.

Powered by a 7800 mAh Lithium battery with IPX8 protection, and a charger with IP 67 protection. It's easy to use and maintain, coming with a user manual, filter basket, charger, and hook. The LED indicators show its status.

It is an intelligent pool cleaner with features like self-adaptation to different conditions and an automatic shut-off for battery protection. It's set to revolutionize pool maintenance.

2 IMPORTANT SAFETY INSTRUCTIONS

PLEASE READ AND FOLLOW ALL INSTRUCTIONS

⚠ Please adhere to the following warnings and cautions before you use the Pool Cleaner.

⚠ Use the device only according to these safety instructions.
It is not liable for any loss or injury caused by improper use of the device.

1. Use only the original battery and battery charger provided.
2. Keep the device out of the reach of children, vulnerable persons (with reduced physical, sensory, or mental abilities), and persons who lack the requisite knowledge and experience. Users must receive appropriate instruction and supervision before using the device. Do not allow children to perform cleaning or maintenance tasks.
3. Be careful when handling the battery casing to avoid the risk of fire and/or burns. Do not open it or crush it and do not place it near a source of heat.
4. Do not insert hands and/or fingers into the impeller motor area.
5. Remove the pool cleaner from the pool before allowing people to enter the pool.
6. Always switch OFF the device before cleaning the filters and /or examining the robot.
7. Be careful when lifting the device to avoid bodily injury.
8. Do not use the device and/or its battery in case of any mechanical damage.
9. Do not use an extension cord to connect the battery charger to electric socket. Use only an appropriately located power outlet.
10. In case of power cord is damaged the entire charger must be replaced with original.
11. Place the battery charger at least 3.5 m / 12 ft from the pool edge during operation.
12. Place the battery charger at least 11 cm / 4 in above the ground to protect users against electric shock.
13. Use a Residual Current Device (RCD) with a rated residual operating current not exceeding 3OmA to power up the battery charger.

    For USA/Canada installations:

    - The battery charger should be connected only to a power supply circuit that is protected by a Ground Fault Circuit Interrupter (GFCI). This GFCI should also be tested on a routine basis.
    - To test the GFCI, push the Test button. The GFCI should interrupt the power. Push the Reset button. The power should be restored. If the GFCI fails to operate in this manner, the GFCI is defective.
    - If the GFCI interrupts power to the battery charger without the Test button being pushed, a ground current may be flowing, indicating the possibility of electric shock. Do not use the battery charger. Disconnect the battery charger and contact the manufacturer for assistance.
14. The Lithium-Ion battery should be recycled at a certified battery electronics recycler. Batteries should NOT be discarded as waste or placed in municipal recycling bins. Do not disassemble the battery.


PLEASE SAVE THESE INSTRUCTIONS.

3 SPECIFICATIONS


Item	Supported Values	
Pool Area	Up to 200 m² (2150 sq ft)	
Water Depth	0.5-3 m (1.6-9.8 ft)	
Power Adapter/AC Input	100–240 VAC, 50–60 Hz	
Power Adapter/DC output	28 V, 2 A / 28 V, 2.3 A	
Power Adapter/Rated Power	56W / 64.4W	
Lithium Battery	7800 mAh	
Cleaning Cycle Time	About 180 min	
Charge Time	4 hours	
Filtration System	300 μm	
Moving Velocity	15 m/min (49.2 ft/min)	
Dimensions (L x W x H)	360 x 354 x225 mm (14.1 x 13.9 x 8.8 in)	
Net Weight	6.5kg (14.33 lb)	
Motor and Battery Protection	IP X8	
Charger Protection	IP 67	
Storage Temperature	-10˚- 40˚C (14˚- 104˚F)	
Water Conditions	Use the device only in the below water conditions	
	Chlorine	Max 4 PPM
	Temperature	5–35°C (41–95°F)
	pH	7.0–7.8
	NaCl	Max 5000 PPM

4 POOL CLEANERPARTS


Below is an illustration of the Pool Cleaner.

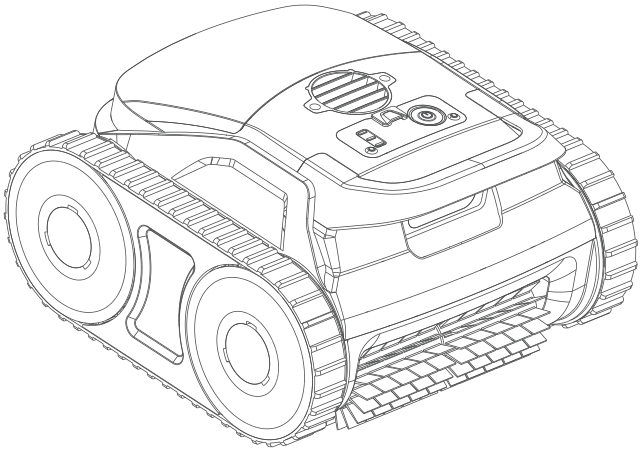


The parts included in the package delivered are illustrated here:

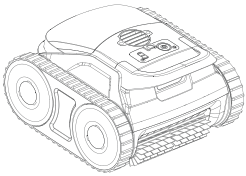

Robot



Filter Basket



Charger



Hook



Ser Manual

5 USE THE POOL CLEANER

5.1 Before You Start

Please make sure to charge the device before initial usage.

The water depth in the pool should be at least 0.5 m (1.6 ft) to achieve optimal cleaning performance.


5.2 LED Indicators

The below table outlines the LED indicators displayed on the device and their significance.


LED Color	Solid Display	Flashing Display
Blue	Device Working	**Flashing 1 sec:** Device Starting **Flashing 3 secs:** Device Idle
Red	Charging	Low Battery
Green	Fully Charged	
Yellow		Device Malfunction
Purple		Device stuck
White		Equipment upgrades

5.3 Charge the Pool Cleaner

Connect the device to the electric socket using the battery charger provided. The charging process will begin, and the LED indicator will show solid **red**.

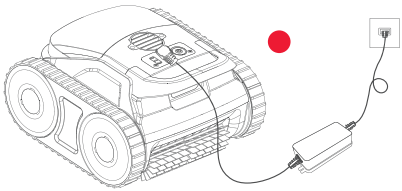


When the device is fully charged the LED indicator will show solid **green**. After 10 minutes it will turn off automatically.

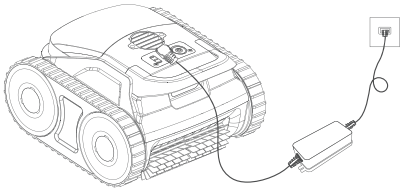


Disconnect the device from the electric socket.

5.4 Place the Pool Cleaner in the Pool

Before placing the device in the pool, press the button to turn it on.
A flashing **blue** LED indicator will display. You can switch modes by pressing a button. The mode is the default when the machine is turned on.

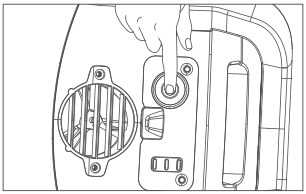


Place the device into the pool, making sure that the water covers the top of the device to enable correct usage. When cleaning commences the LED indicator will revert to solid **blue**.

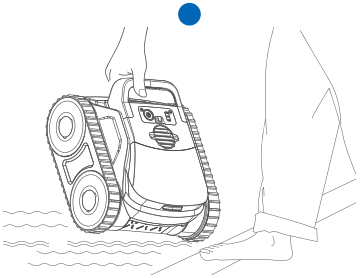

5.5 Remove the Pool Cleaner from the Pool


To remove the device from the pool, use the hook provided by attaching it to a suitable pole (not included), such as a regular broom pole.

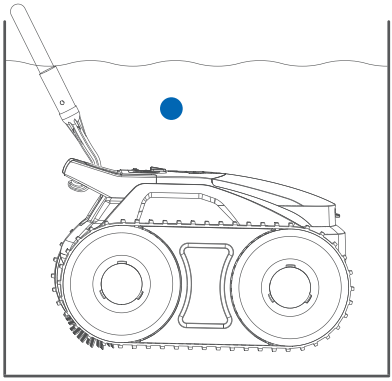

When extracting the device from the pool, take care not to knock it on the wall of the pool as this could cause damage to the device.


5.6 Switch Off the Pool Cleaner

Press the button for 3 seconds. The three indicator lights will blink red and the buzzer will sound. When both stop, the device is off.

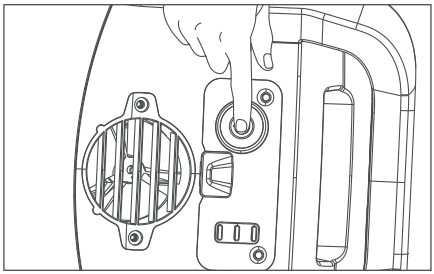


5.7 Clean the Pool Cleaner


Place the pool cleaner on a solid surface at the poolside. Make sure it is switched OFF. Press the switch to open the lid and remove the filter basket.

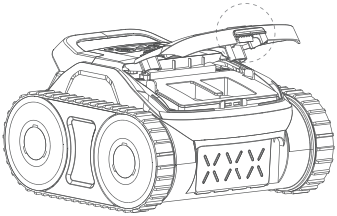

Press the snap when lowering the lid to ensure the lid is locked

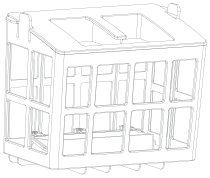

Open the cap of the basket and clean it before it dries out.

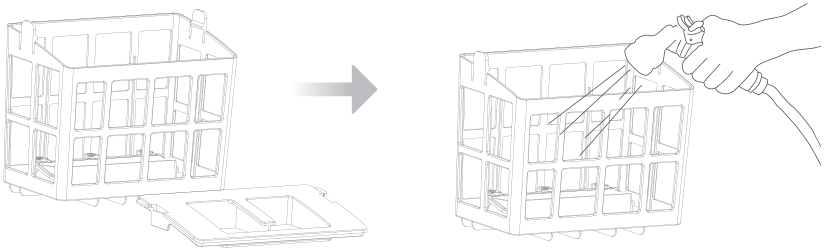

6 STORAGE

When the pool cleaner is not in use for an extended period, proceed as follows to store the device:

1. Make sure there is no water left in the pool cleaner.
2. Thoroughly clean the filter basket and insert it back in place.
3. Store the pool cleaner in a protected area away from direct sunlight / rain / frost at a temperature between -10-40°C / 14-104°F.
4. Charge the pool cleaner once every 3 months to protect the battery.

7 FAQS AND TROUBLESHOOTING

Some common user questions are itemized here below. If these suggested solutions do not solve any problem you may have encountered, please refer to www.seautorobots.com or contact Seauto Customer Support.

Q: What kind of pool is suitable?

A: It is recommended to use the cleaner for pools Up to 200 m^2 (2100 sq ft).

Q: Why doesn't the cleaner respond after turning on the machine?

A: The battery may be dead after long-time delivery or storage.
Charge the device, the LED indicator will be solid red while charging.

Q: Why can't the cleaner climb the wall?

A: There is garbage or debris in the filter basket. Remove the basket and clean it.

Q: Why does the cleaner sit at the bottom of the pool and it doesn't move or moves slowly?

A1: The device may be caught in the drain outlet on the pool floor. It will try to float itself to break free. If it is still stuck after several minutes, use the pole to move it.

A2: The device may absorb an extensive amount of debris in a very short time when placed in a dirty pool. Check and clean the filters if needed.

Q: Why does the front part float while the rear part stays on the floor?

A: This is an intelligent feature of the pool cleaner, to break free from becoming stuck.

Q: Why can't the cleaner clean the wall or waterline?

A: The device may contain too much debris in the filter basket.
This could weaken its suction capacity.

Q: Why does the cleaner automatically switch off after a few hours of charging?

A: The device is designed to shut off automatically in 10 minutes after being fully charged to protect the battery and ensure its lifespan.

Q: What is the issue when the cleaner lights up with a yellow indicator?

A: The yellow LED indicator means the cleaner has a problem such as over-currenting because it is stuck, or fails to start. Remove the cleaner from the pool and re-start it.

Q: What is the issue when the cleaner lights up with a purple LED indicator?

A: The purple LED indicator means that the cleaner is stuck. Pull the cleaner out of the water. When the blue LED indicator starts to flash, place it back in the pool to continue the cleaning process.

Q: How can I obtain replacement accessories?

A: Please contact your purchase channel.

Q: How can I buy a long pole and what size is it?

A: A pick-up hook is available in the box, which is the universal pool accessory. The hook fits a standard pole size with a 25–32 mm (1–1/4 ins) diameter connection end. You can easily find a pole in your local market or shop online.

Q: Why are there some water droplets inside a newly purchased machine?

A: Every machine is rigorously tested before leaving the factory, including underwater tests, etc. So, there may be a little water left inside. You can use it normally.

---

8 SEAUTO CUSTOMER SERVICE

Online Service: https://bit.ly/3AruRQS
US Toll-free: +1 800-618-8968
Email: support@seautorobots.com
Official Website: https://seautorobots.com/
Facebook: @Seauto
Monday to Friday, 09:00-18:00 (EST)

⚠ Warm Tips: You can contact us through the above methods. In order to help you faster, we recommend that you give priority to our online service.


How to contact our online customer service:

Method 1: Scan the QR code to reach
The fastest way: Take out your mobile phone, aim at the QR code below and scan it gently, and you can start chatting with us immediately.


SCAN ME

Method 2: Click the link
Copy and paste is more convenient: If you cannot scan the code, please copy the following link and paste it into the browser address bar:
https://bit.ly/3AruRQS


Start chatting
1. Enter the chat window: Whether you scan the code or click the link, you will directly enter our online chat window.

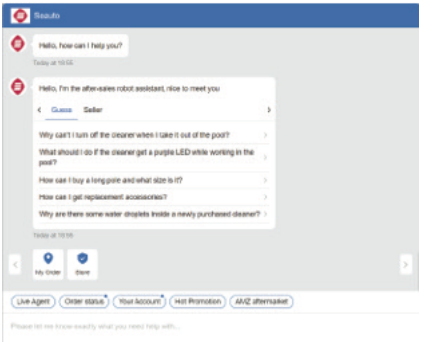

2.Describe your problem: Please tell us in detail the problem you encountered or the help you need us to provide.

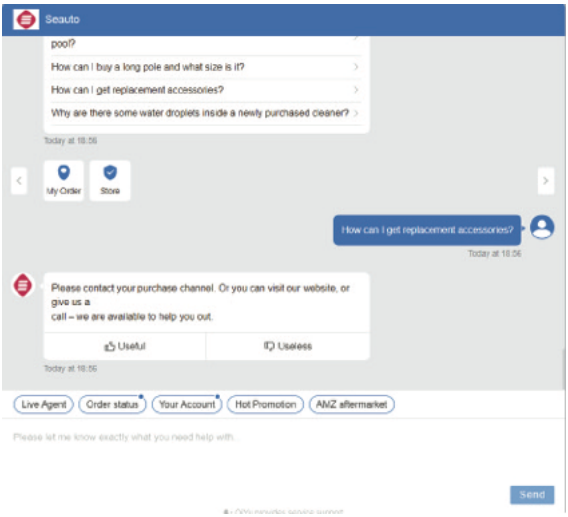

3. Real-time communication: Our customer service staff will reply to you as soon as possible and interact with you in real time.

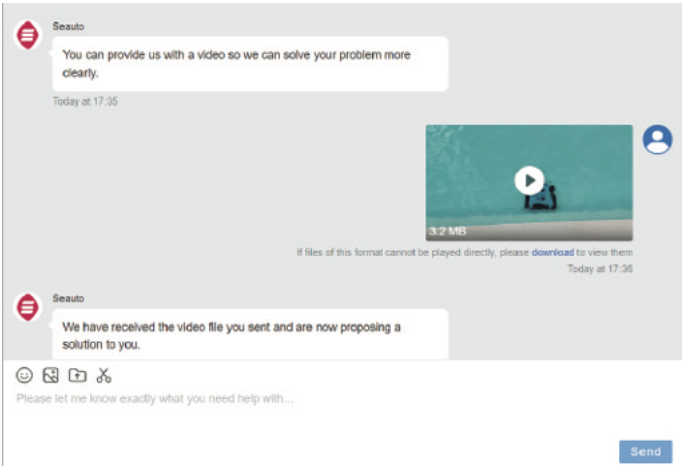

FAQ:
Customer service working hours: We provide 7*24 hours online service, ready to answer your questions at any time.
Supported languages: Currently supports Chinese (Simplified/Traditional) and English.
Service scope: Covers product consultation, order inquiry, technical support, etc.
Warm Tips:
Keep the network unobstructed: In order to ensure smooth chat, please keep the network connection stable.
Provide detailed information: When describing the problem, please provide your order number, product model and other relevant information so that we can solve the problem for you faster.

If you have any questions, please feel free to contact our online customer service.
I wish you a happy use!

Built by: Seauto
Model Name: ABYS 200
Manufacture No.: B2 Pro
+1 800-618-8968
support@seautorobots.com
https://seautorobots.com
Mon-Fri, 09:00-18:00 (EST)

Made in China

01.007.0059